

# Table of Contents

## TOPFORM II OPERATION

### SECTION 1

#### Introduction & Basic Description

Notes, Cautions and Warnings	1
Systems Overview	2
Installation Procedures	4
Bill of Material	5
Unpacking and Selecting Location	5
Steam Requirement	7
Air Requirement	7
Electrical Requirement	8
How to Test the Machine	8
Operating Procedure	9
Description of Control Devices	9,10
Automatic Waist Sizing & Stops	10
Loading, Finishing and Removal	11
Pleated Pants	13
Required Maintenance	14
WARNING	15

## PARTS IDENTIFICATION

### SECTION 2

#### Parts Identification & Bin Numbers

Fly and Topping Clamp Cylinders	P1
Waist Cylinder / Stop Assy.	P3
Fly Bar / Topping Clamps	P5
Top Clamp Assembly Screws	P7
Standard Manifold	P9
Lower Arm Assembly	P11
Topping Buck Assemblies (4 styles)	P13
Seat Plate Assembly	P15
Covers and Pads	P17

Shaping Blades	P19
Extension Bars – Front Assy.	P21
Trunion (cuff tensioning) Cylinder	P23
Waist Carriage Assembly / Guide Rails	P25
Side Clamp Inner Assembly	P27
Side Clamp Outer Assembly	P29
Blower / Heat Exchanger Assembly	P31
Blower / Motor Assembly	P33
Cuff Clamp Lift Cylinder Assembly	P35
Cuff Clamp Cylinder Assembly	P39
Air Schematic Part Locator	P41
Main Air Regulator / Filter Assembly	P43
Control Box Part Identification	P45 & 45A
Foot Switch, Miscellaneous Parts	P47
Steam Pot Assembly	P49
Steam Supply Schematic / Part Locator	P51
Steam Return Schematic / Part Locator	P55
Flex Steam Line Kit	P59

## ERGONOMIC LIFT PARTS IDENTIFICATION

Covers and Pads	ELP-1
Steam Shield (Plastic)	ELP-3
Blower/Heat Exchanger Assembly	ELP-5
Blower Motor	ELP-7
Cuff Clamp Lift Cylinders	ELP-8
Cuff Clamp Paddles (12 Inch)	ELP-11
Ergo Lift Assy, Flex Steam Lines	ELP-13
Ergo Lift Drum Switch	ELP-15
Ergo Wiring Diagrams	ELP-17 – ELP-21

## (OPTIONAL) STEAM POD PARTS PAGES

Steam Pod Plumbing	SPP-1
Steam Pod Assembly	SPP-2

<b>Steam Pod Cylinder</b>	<b>SPP-6</b>
<b>Steam Pod Stand / Conduit</b>	<b>SPP-8</b>
<b>Steam Pod Steam Diagram</b>	<b>SPP-10</b>
<b>Steam Pod Return Steam Diagram</b>	<b>SPP-12</b>
<b>Steam Pod Terminal on Processor</b>	<b>SPP-14</b>
<b>Steam Pod Wiring Diagram</b>	<b>SPP-15</b>
<b>External Pipe option for Steam Pod</b>	<b>SPP-16</b>

## **S C H E M A T I C S / D I A G R A M S**

### **SECTION 3**

#### ***Section 3 Schematics and Diagrams***

<b>Installation Instructions</b>	<b>T1</b>
<b>Steam Plumbing (Hook-Up) Diagram</b>	<b>TP-2</b>
<b>Maintenance Schedule</b>	<b>T3</b>
<b>50 Finishing Formulas</b>	<b>T4</b>
<b>Processor Inputs / Outputs</b>	<b>TP-5</b>
<b>Processor Wiring Connections</b>	<b>TP-6</b>
<b>Wiring Control Panel to Components</b>	<b>TP-7</b>
<b>110 Volt Panel to Components</b>	<b>TP-8</b>
<b>Ergo Panel to Components</b>	<b>TP-9</b>
<b>Ergo 110 volt Panel to Components</b>	<b>TP-10</b>
<b>Steam Supply (1 Steam Solenoid)</b>	<b>TP-11</b>
<b>Steam Supply (2 Steam Solenoids)</b>	<b>TP-12</b>
<b>Steam Return System</b>	<b>TP-13</b>
<b>Air Layout</b>	<b>TP-14</b>
<b>Air Layout with Auto Waist Sizing</b>	<b>TP-14A</b>
<b>Typical Tandem Layout</b>	<b>T15</b>
<b>Size Reference Chart</b>	<b>T16</b>
<b>Warranty</b>	<b>T17</b>

### **TROUBLESHOOTING SECTION**

**Trouble Shooting Pages**